


LivChic

Owner's Instructions

LivChic Savvy Hair Dryer

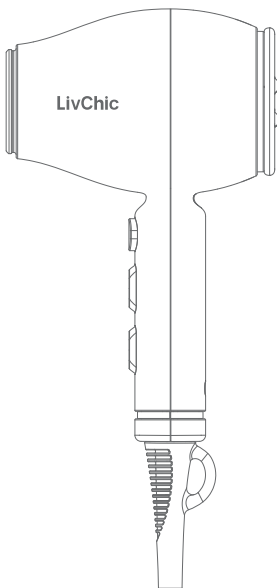


Owner's Instructions: Before operating the appliance, please read these instructions carefully and keep them for future reference.

DESCRIPTIONS



• NOZZLE

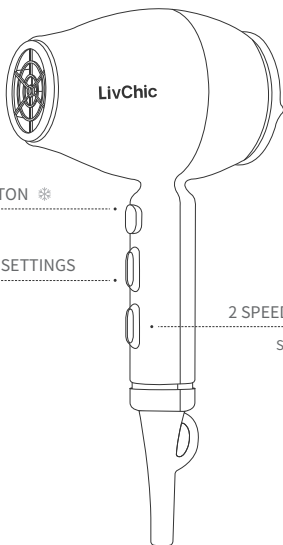

..... COLD SHOT BUTTON ❄

..... 3 TEMPERATURE SETTINGS

- ☀ Hot Air
- ⦿ Warm Air
- Normal Air

..... 2 SPEED SETTINGS

- Strong Wind 2
- Mild Wind 1
- Poweroff 0

1. PRODUCT: LivChic Savvy Hair Dryer

2. TYPE DESIGNATION: LD101-3IN

3. ELECTRICAL RATING: 220V - 240V ~, 50/60 Hz, 1700-2000W

IMPORTANT SAFETY INSTRUCTIONS

When using electric appliance, especially when children are around, basic safety precautions should always be followed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER: As with most electrical appliances, electric parts are electrically active when switch is Off.

To reduce the risk of injury or death by electric shock:

1. Always unplug it immediately after using as the unit is still electrically charged.
2. Warning-This appliance must not be taken into a bathroom. It should not be used near basins or other vessels containing water. Do not use while bathing.



3. Do not place or store the appliance where it can fall or be pulled into a tub or sink.
4. Do not place the appliance in or drop into the water or other liquids.
5. If the appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. When not in use, unplug the dryer. Allow it to cool and store it in a safe, dry location.
2. This dryer is hot when in use. Do not let eyes or bare skin touch heated surfaces.
3. Do not place the heated dryer directly on any surface other than a thermal mat or iron holder.

4. Never leave the appliance unattended while plugged in.
5. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
6. Use this appliance only for its intended use as described in this manual.
7. Never operate this appliance if it has a damaged cord or plug.
8. Never allow the power supply cord to be pulled, jerked, strained, twisted, or severely bent, especially at the plug connections. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short. Handle the cord carefully for longer life.
9. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
10. Never drop or insert any object(s) into any opening on the appliance.
11. Do not operate where aerosol spray products are being used or where oxygen is abundant in certain situation.
12. Do not use an extension cord with this appliance.
13. Never use while sleeping.
14. Do not operate with voltage converter.
15. This appliance is provided with a protective device that may make it inoperable under some abnormal conditions (such as immersion of the appliance).
16. If the appliance is not working properly, return it to Customer Service for examination and possible replacement under warranty.
17. Never place the appliance on a soft surface, such as a bed or couch while plugged in..
18. Do not use near eyes, skin or other heat sensitive areas.
19. Do not leave dryer in hot humid places.
20. Keep the air openings free of lint, hair, and the like.
21. Do not place appliance on any surface while it is operating.
22. Do not use any attachments with this hair dryer, other than those supplied by LivChic.

23. We do not accept responsibility for damage to the product, persons or other items, caused by misuse, abuse or noncompliance with these instructions.

SAVE THESE INSTRUCTIONS

OPERATION INSTRUCTIONS

This appliance is for: 220V - 240V~, 50/60 Hz, 1700-2000W.

When plugging the appliance into the outlet prior to use, be aware that the appliance plug and voltage match your outlet. The appliance working voltage is 220-240V, and it can't work under other voltage.

BASIC OPERATIONS

Plug the hair dryer into the correct power supply.

Speed Setting (Select the airflow desired)

Position 0 : switch the dryer off

Position 1 : Mild airflow for gentle drying.

Position 2 : Strong airflow for very quick drying.

Heat Setting (control the heating temperature):

Position ● : Normal Air for gentle drying cold airflow.

Position ◐ : Warm Air for medium heat.

Position ☀ : Hot Air for high heat.

Hold Cold Shot Button if desired.

After use, switch the dryer off by moving the Speed Setting to the " 0 " position before unplugging from the power supply.

Do not pull the cord, grasp the plug and to unplug the appliance.

MAINTENANCE

Your appliance is virtually maintenance free. No lubrication is needed. Keep heated surfaces clean and free of dust, dirt, and hair spray. If cleaning is required, disconnect the appliance from the power source and wipe the exterior with a damp cloth. If the cord is twisted, untwist prior to use.

Electrical converters CANNOT be used.

If any malfunction occurs, do not attempt to repair it yourself. Contact the Customer Service. (See “LIMITED WARRANTY” Section).
GROUND INSTRUCTIONS, SERVICING OF DOUBLE-INSULATED APPLIANCES

In a double-insulated appliance, two systems of insulation are provided instead of grounding. No grounding means is provided on a double insulated appliance, nor should a means for grounding be added to the appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system and should be done only by a qualified service personnel. Replacement parts for a double-insulated appliance must be identical to the parts they replace. A double-insulated appliance is marked with the words “DOUBLE INSULATION or DOUBLE INSULATED.”

The symbol within a square  may also be marked on the appliance.

LIMITED WARRANTY

Thank you for purchasing our products! Shenzhen Ellen Technology Co., Ltd. Is a company Specializing in the production of hair care and beauty products.

As the leader of this industry, we have our own R & D team, become the first in the industry to use ceramic ionic technology, wants you to be satisfied with your appliance purchase and makes the following one year limited warranty for Shenzhen Ellen Technology Co., Ltd appliances purchased through our online Store or authorized dealers.

LIMITED ONE-YEAR WARRANTY

What Does This Warranty Cover?

Any malfunction or defect caused by faulty materials or workmanship for any Shenzhen Ellen Technology Co., Ltd appliance that was purchased through our online store.

How Long Does The Warranty Last?

One year from the date of purchase.

Limitations:

- (A) THE DURATION OF ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, GOOD AND WORKMANLIKE PERFORMANCE OF SERVICE, OR OTHERWISE, THIS PRODUCT ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY SET FORTH ABOVE WHICH IS ONE(1) YEAR FROM THE DATE OF PURCHASE.
- (B) SHENZHEN ELLEN TECHNOLOGY CO., LTD. SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES THAT ARISE OUT OF THE INSTALLATION, USE, OR OPERATION OF ITS APPLIANCES OR OUT OF THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY.
- (C) APPLIANCES PURCHASED FROM ANY OUTLET OTHER THAN LIVCHIC ONLINE STORE OR AUTHORIZED DEALERS ARE NOT COVERED BY THIS WARRANTY.
- (D) ANY ALTERATION OR REMOVAL OF THE SERIAL NUMBER OR OTHER IDENTIFYING MARKS ON THE APPLIANCE OR PACKAGING WILL VOID THIS WARRANTY.
- (E) ANY USE OF THE APPLIANCE NOT IN COMPLIANCE WITH THE MANUAL WILL VOID THIS WARRANTY.

What Will LivChic Do?

Shenzhen Ellen Technology Co., Ltd will replace your appliance at no charge other than a \$15.00 return shipping and handling fee. The replacement appliance is warranted for the remainder of the original One year warranty period. If the appliance sent in is no longer available, it will be replaced with a comparable appliance.

What Does This Warranty Not Cover?

This warranty does not cover any steel parts; plastic parts; flex cord; damages caused by negligence, misuse, tampering, alteration, failure to follow safety, operation or maintenance instructions; appliances purchased through any other outlet that is not our online store or authorized dealers; or alteration or removal of the serial number or

other identifying marks on the appliance or the packaging. Furthermore, this warranty does not cover normal wear and tear.

How to make a warranty claim.

SAVE YOUR ORIGINAL RECEIPT. Then Either:

(A) Return the appliance with the original receipt to the Sales outlets from which it was purchased where the appliance may be exchanged at no charge, depending on the retailer's exchange policy (terms and conditions may vary depending on store's exchange policy);

or

(B) Contact LivChic Customer Service at Livchic01@fenda.com if you have any questions regarding your tool. Send your tool, along with any completed warranty card that accompanied the tool at time of purchase, the original receipt indicating the location and date of purchase and a check or money order made payable to Shenzhen Ellen Technology Co., Ltd. for \$15 to cover shipping and handling, to the following address:

ShenZhen Ellen Technology Co., Ltd.

Fenda Park (Fenda Hi-Tech Park, ShenZhen, China)

ShenZhen, GuangDong 518000

Email: Livchic01@fenda.com

We strongly recommend tracking your shipment using UPS, Federal Express or Registered Mail and keeping the tracking number for your records. You are responsible for the shipping charges to send your appliance to Shenzhen Ellen Technology Co., Ltd. Shenzhen Ellen Technology Co., Ltd. is not responsible for lost or stolen items or tools that are lost during shipping to Shenzhen Ellen Technology Co., Ltd.

How Does Country Law Apply?

This warranty gives you specific legal rights, and you may also have other rights which vary from country to country. Some countries do not allow limitations on how long an implied warranty lasts, so the above limitation of implied warranties may not apply to you.

Some countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Thank you again for your purchase.

We appreciate the opportunity to serve our customers. appliances purchased through our online Store or authorized dealers.

Warranty card

Product name: _____

Model NO : _____

Purchase From : _____

Order number: _____

Customer name: _____

Customer email: _____

Customer ship address: _____

Product problem: _____
