
LivChic


Owner's Instructions

LivChic Ceramic Extra Straightener

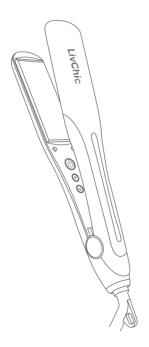

Owner's Instructions: Before operating the appliance, please read these instructions carefully and keep them for future reference.

DESCRIPTIONS

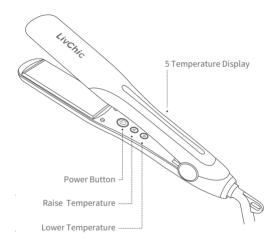

- 1. PRODUCT: LivChic Ceramic Extra Straightener
- 2. TYPE DESIGNATION: LS304-3IN
- 3. ELECTRICAL RATING: 110-240V~, 50/60Hz, 65W

IMPORTANT SAFETY INSTRUCTIONS

When using electric appliance, especially when children are present, basic safety precautions should always be followed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

To reduce the risk of injury or death by electric shock:

- Always unplug the tool immediately after using as the unit is still electrically charged.
- WARNING: Do not use appliance near bathtub, sink,or other containers or basins filled with water. Do not use appliance while bathing.



- 3. Do not place in or drop into the water or other liquids.
- If an appliance falls into the water, unplug it immediately.
 Do not reach into the water.

WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons:

- When not in use, unplug the iron. Allow it to cool and store in a safe, dry location.
- This iron is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the heated iron directly on any surface while it is hot, other than a thermal mat.
- 4. Never leave the appliance unattended while plugged in.
- Close supervision is necessary when this appliance is used by,on, or near children or individuals with certain disabilities.
- 6. This iron is intended to be used only on head hair.

- Use this appliance only for its intended use as described in this manual.
- 8. Never operate this appliance if it has a damaged cord or plug.
- 9. Never allow the power supply cord to be pulled, jerked, strained, twisted, or severely bent, especially at the plug connections. The foregoing may damage the cord, including at or near the high flex point of entry into the appliance, causing it to rupture and short. Handle the cord carefully for longer life.
- 10. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- 11. Never drop or insert any object(s) into any opening in the appliance.
- Do not use outdoors or operate where aerosol spray products are being used or where oxygen is being administered.
- 13. Do not use an extension cord with this appliance.
- 14. Never use while sleeping.
- 15. Do not operate with voltage converter.
- 16. This appliance is provided with a protective device that may make it inoperable under some abnormal conditions (such as immersion of the appliance).
- If appliance is not working properly, return it to Customer Service for examination and possible replacement under warranty.
- 18. While heating or cooling the appliance, never place it on a soft surface, such as a bed, couch, or carpet.
- 19. Do not use hot plates near eyes, skin or other heat sensitive areas.
- 20. Do not leave iron in hot humid places.
- Discontinue use immediately and unplug if iron becomes too hot or malfunctions in any way.

SAVE THESE INSTRUCTIONS

OPERATION INSTRUCTIONS

This appliance is for: $110-240V \sim$, 50/60Hz, 65W.

When plugging the appliance into the outlet prior to use, be aware that the appliance plug match your outlet. As a safety feature the appliance is dual voltage compatible.

If the plug does not fit fully in the outlet, buy a Plug adapter.

BASIC OPERATIONS

- 1. Plug the appliance into the correct outlet.
- 2.Click the power button, than then the 190° C LED light will twinkling flashing, 190° C is a suitable temperature for most hair types.
- 3. There are 6 temperature models: 230°C, 210°C, 190°C, 170°C, 150°C, 130°C.
- You can chose choose the temperature by press the ▲ or ▼ button, when the desired temperature is reached, the light will remains steady.
- 5. Press the power button off after using the appliance.
- Do not pull the cord, grasp the plug to unplug the appliance. After 1 hour of stand-by, this tool will shut off automatically.

MAINTENANCE

Your appliance is virtually maintenance free. No lubrication is needed. Keep heated surfaces clean and free of dust, dirt, and hair spray. If cleaning becomes necessary, disconnect the appliance from the power source and wipe the exterior with a damp cloth. If the cord becomes twisted, untwist prior to use.

When in frequent daily use, set the iron on a thermal mat or other proper surface.

Electrical converters CANNOT be used.

If any malfunction occurs, do not attempt to repair the tool yourself. Contact the Customer Service. (See "LIMITED WARRANTY" Section).

GROUND INSTRUCTIONS, SERVICING OF DOUBLE INSULATED APPLIANCES

In a double-insulated appliance, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added to the appliance.

Servicing a double-insulated appliance requires extreme care and knowledge of the system and should be done only by a qualified service personnel. Replacement parts for a double insulated appliance must be identical to the parts they replace. A double-insulated appliance is marked with the words "DOUBLE INSULATION or DOUBLE INSULATED."

The symbol within a square appliance.

LIMITED WARRANTY

Thank you for purchasing our products! Shenzhen Ellen Technology Co., Ltd. is a company Specializing in the production of hair care and beauty products. As the leader of this industry, we have our own R & D team, become the first in the industry to use ceramic ionic technology, wants you to be satisfied with your appliance purchase and makes the following one year limited warranty for Shenzhen Ellen Technology Co., Ltd. appliances purchased through our online Store or authorized dealers.

LIMITED ONE-YEAR WARRANTY

What Does This Warranty Cover?

Any malfunction or defect caused by faulty materials or workmanship for any Shenzhen Ellen Technology Co., Ltd. appliance that was purchased through our online store or authorized dealers

How Long Does The Warranty Last?

One years from the date of purchase.

Limitations:

- (A) THE DURATION OF ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, GOOD AND WORKMANLIKE PERFORMANCE OF SERVICE, OR OTHERWISE, ON THIS PRODUCT ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY SET FORTH ABOVE WHICH IS ONE (1) YEARS FROMTHE DATE OF PURCHASE.
- (B) SHENZHEN ELLEN TECHNOLOGY CO., LTD. SHALL NOT
 BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES
 THAT ARISE OUT OF THE INSTALLATION, USE, OR OPERATION OF
 ITS APPLIANCES OR OUT OF THE BREACH OF ANY EXPRESS OR
 IMPLIED WARRANTY
- (C) APPLIANCES PURCHASED FROM ANY OUTLET OTHER THAN
 LIVCHIC ONLINE STORE ARE NOT COVERED BY THIS WARRANTY.
- (D) ANY ALTERATION OR REMOVAL OF THE SERIAL NUMBER OR OTHER IDENTIFYING MARKS ON THE APPLIANCE OR PACKAGING WILL VOID THIS WARRANTY.
- (E) ANY USE OF THE APPLIANCE NOT IN COMPLIANCE WITH THE MANUAL WILL VOID THIS WARRANTY.

What Will Ellen Technology Do?

Shenzhen Ellen Technology Co., Ltd will replace your appliance at no charge other than a \$15.00 return shipping and handling fee. The replacement appliance is warranted for the remainder of the original one year warranty period. If the appliance sent in is no longer available, it will be replaced with a comparable appliance.

What Does This Warranty Not Cover?

This warranty does not cover any steel parts; plastic parts; flex cord; damages caused by negligence, misuse, tampering, alteration, failure to follow safety, operation or maintenance instructions; appliances purchased through any other outlet that is not our online store; or alteration or removal of the serial number or other identifying marks

on the appliance or the packaging. Further, this warranty does not cover normal wear and tear.

How to make a warranty claim.

SAVE YOUR ORIGINAL RECEIPT. Then Either:

LivChic Customer Service

(A) Return the appliance with the original receipt to the Sales outlets from which it was purchased, where the appliance may be exchanged at no charge, depending on the retailer's exchange policy (terms and conditions may vary depending on store's exchange policy);

or

(B) Contact LivChic Customer Service at Livchic01@fenda.com if you have any questions regarding your. Send your appliance, along with any completed warranty card that accompanied the applianceat time of purchase, the original receipt indicating the location and date of purchase and a check or money order made payable to Shenzhen Ellen Technology Co., Ltd. for \$15 to cover shipping and handling, to the following address:

ShenZhen Ellen Technology Co., Ltd.
Fenda Park (Fenda Hi-Tech Park, ShenZhen, China)
ShenZhen, GuangDong 518000
Email: Livchic01@fenda.com

We strongly recommend tracking your shipment using UPS, Federal Express or Registered Mail and keeping the tracking number for your records. You are responsible for the shipping charges to send your appliance to Shenzhen Ellen Technology Co., Ltd. Shenzhen Ellen Technology Co., Ltd. is not responsible for lost or stolen items or tools that are lost during shipping to Shenzhen Ellen Technology Co., Ltd.

How Does Country Law Apply?

This warranty gives you specific legal rights, and you may also have other rights which vary from country to country. Some countries do not allow limitations on how long an implied warranty lasts, so the above limitation of implied warranties may not apply to you. Some countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Thank you again for your purchase. We appreciate the opportunity to serve our customers.

Warranty card

Product name:
Model NO :
Purchase From :
Order number:
Customer name:
Customer email:
Customer ship address:
Product problem: